


UPUTSTVO ZA KORIŠĆENJE ANDROID APLIKACIJE

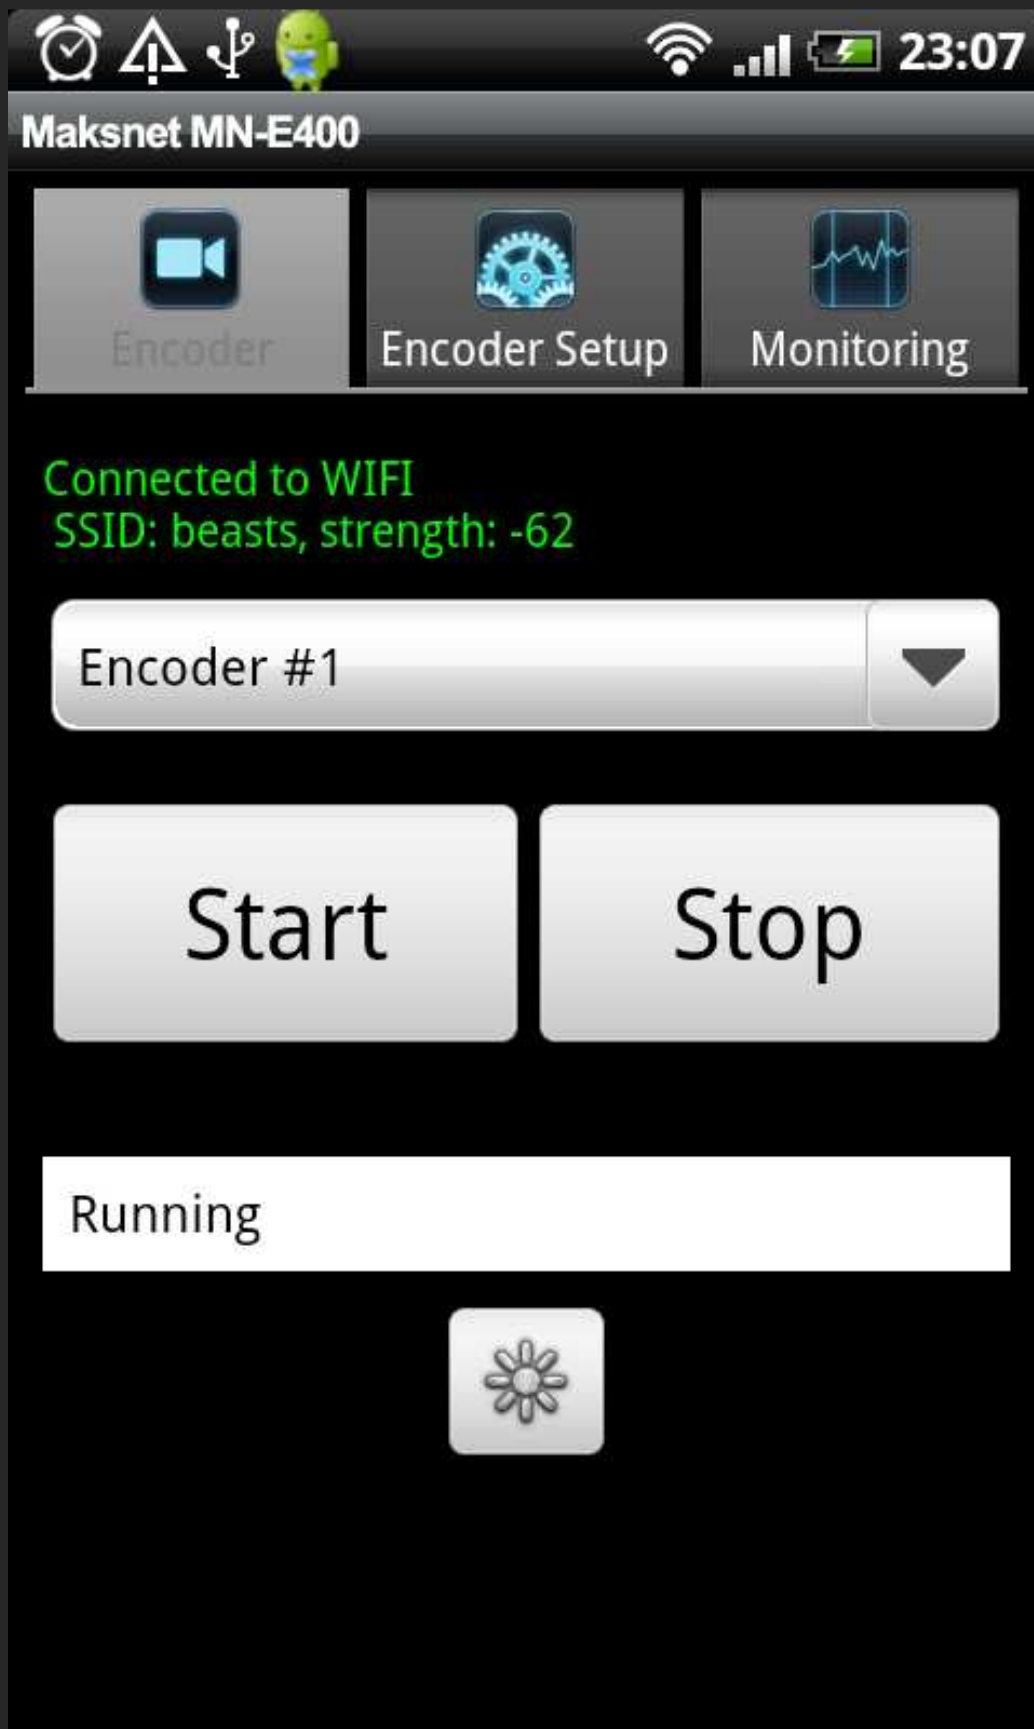



23:08

Maksnet MN-E400



Encoder



Encoder Setup



Monitoring

Connected to WIFI
SSID: beasts, strength: -74

Encoder #1



- Encoder #1
- Encoder #2

Running





Wi-Fi signal, cellular signal strength, battery level, and time 23:09.

Maksnet MN-E400

Device

Encoder #1

Enter encoder address



Encoder #2

Enter encoder address



Encoder #3

Enter encoder address



Encoder #4

Enter encoder address



Maksnet MN-E400

Device

Encoder #1

Enter encoder address



Encoder #2

En

E

En

E

En



Encoder #1

Enter encoder address

OK

Cancel



23:09

Maksnet MN-E400



Encoder



Encoder Setup



Monitoring

Encoder #1

1200000

Audio Bitrate

64000

Video Aspect Ratio (for SD)

4x3

MPEG4 Profile

Base

MPEG4 Level

auto



Maksnet MN-E400



Encoder



Encoder Setup



Monitoring

Encoder #1



Audio Bitrate

64000



Video Aspect Ratio (for SD)

4x3



MPEG4 Profile

Base



MPEG4 Level

auto



Read

Save

Maksnet MN-E400



Encoder



Encoder Setup



Monitoring

Encoder #1



Audio Bitrate

64000



4x3



16x9



MPEG4 Level

auto



Read

Save

Maksnet MN-E400



3.0



3.1



3.2



4.0



4.1



auto



Maksnet MN-E400



Encoder




Encoder Setup




Monitoring


Interface name not set

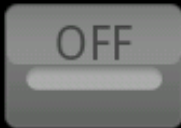


Interface name not set

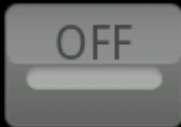

Interface name not set

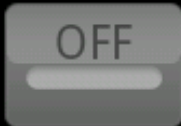

Interface name not set

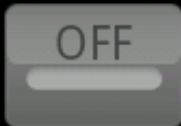

Interface name not set



Maksnet MN-E400

Monitoring HOST

Host

Enter hostname/IP address



Port

Enter port



Username

Enter username



Password

Enter password



Interfaces

Interface 1

Enter interface 1



Interface 2

Enter interface 2



Interface 3



Maksnet MN-E400

More...

Host

Enter hostname/IP address

OK

Cancel

Password



Maksnet MN-E400

Monitoring HOST

Host

Enter hostname/IP address

Port

Enter

U

Enter

P

Enter

Interface

Interface 1

Enter interface 1

Interface 2

Enter interface 2

Interface 3

Enter interface 3

▼ Interface 1

Enter interface 1

.....

OK Cancel



Wi-Fi signal, cellular signal strength, battery level, and time 23:34.

Maksnet MN-E400



Encoder



Encoder Setup




Monitoring

modem01




Interface name not set

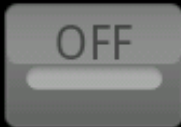


Interface name not set



Interface name not set

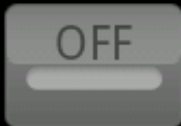

Interface name not set

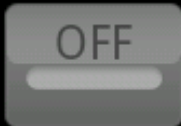



Maksnet MN-E400



Encoder



Encoder Setup



Monitoring

modem01



1.12 Kbps

modem02



Interface name not set



Interface name not set



Interface name not set





Maksnet MN-E400



Encoder



Encoder Setup



Monitoring

modem01



1.12 Kbps

modem02



1.66 Kbps

Interface name not set



Interface name not set



Interface name not set





23:45

Maksnet MN-E400



Encoder



Encoder Setup



Monitoring

modem01



1.14 Kbps

modem02



1.66 Kbps

Interface name not set



Interface name not set



Interface name not set



Encoder Cfg



Monitoring Cfg



Exit